


LBP MECHANICAL EDGE-OF-DOCK LEVELER

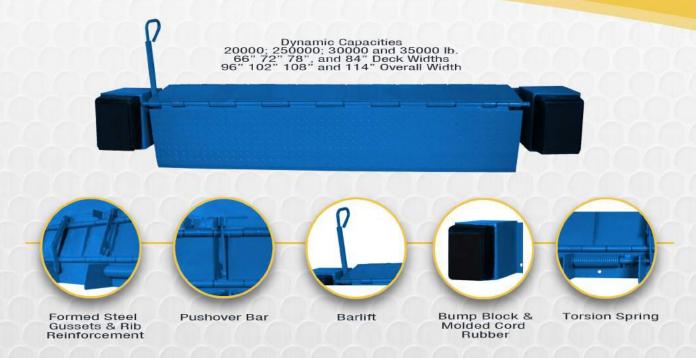

Valuable, Affordable and Dependable each LBP Mechanical Edge-of-Dock Leveler:

Offering a range of lengths, widths, and dynamic capacities, the Edge-of-Dock Leveler combines rugged durability with a competitive price. Edge-of-Dock Levelers provide an operating range of 5" above and 5" below dock, with a minimum lip projection of 12 3/4" and an overall span of 27 3/4". Broad centerplate and lip are constructed of 55,000 lb. minimum yield steel tread plate. Grease fittings on continuous lip hinge are standard with each unit.


STANDARD FEATURES

- Centerplate and lip are constructed of 55,000 lb.
 Minimum Yield Steel Tread Plate.
- Formed, plate steel Bump Blocks and steel faced molded cord Rubber Bumpers protect dock face and Leveler from truck damage.
- Continuous Hinge Design with Grease Fittings included as standard with each unit.
- Torsion Spring Design allows simple, precise adjustment.
- Steel Rivets located at either end of the centerplate hinge provide easy, forklift installation.
- Leveler raises and extends smoothly onto truck bed with use of convenient Bar Handle.
- Unit is easily recycled with truck in position and automatically returns to stored position upon truck departure.
- Stronger Rib reinforcement underneath the centerplate.
- Flat Models available for pallet jack operation. Torsion Spring.
 Pushover Bar Bump.

SPECIFICATION

Mechanical Edge-of-Dock Leveler (inch)

		EOD20-BL66	EOD20-LBP72	EOD20-LBP78	EOD20-LBP84
Model		EOD25-BL66	EOD25-LBP72	EOD25-LBP78	EOD25-LBP84
		EOD30-BL66	EOD30-LBP72	EOD30-LBP78	EOD30-LBP84
Capacity		20000/25000/30000lbs	20000/25000/30000lbs	20000/25000/30000lbs	20000/25000/30000lbs
Lip length	A	15"	15"	15"	15"
Span	В	27 3/4"	27 3/4"	27 3/4"	27 3/4"
Deck width	С	66"	72"	78"	84"
Overall width	D	96"	102"	108"	114"
Travel	Up	5"	5"	5"	5"
	Down	5"	5"	5"	5"

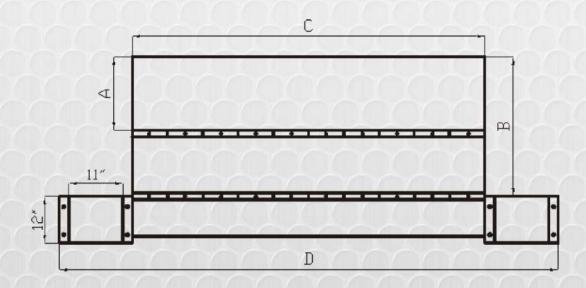

SIMPLE OPERATION:

- 1. Lift the bar up from the stored position. The bar will halt angled towards the truck. Then pull the bar handle back and down towards you. The barlift will automatically lock into position.
- 2. Pull the bar up and forward.
- 3. Lip automatically rides forward onto truck bed
- 4. To prevent damage to the bar, return it to the stored position.



